



e 604


Instruction manual



Delivery includes

- e 604
- MZH 604 microphone clamp
- pouch
- quick guide
- safety guide

Product overview

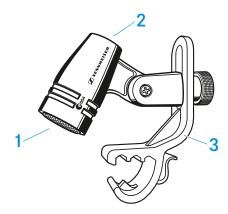

- 1. Sound inlet basket
- 2. XLR-3 connector
- 3. Microphone clamp


SENNHEISER e 604 | 2/7



Installation

Attaching the microphone

 $\, \triangleright \,$ Fasten the holder to the microphone using the screw.

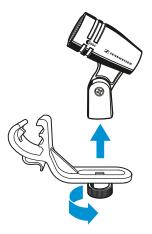

Connecting the microphone

Connect the XLR-3 socket of the microphone cable (optional accessories) to the XLR-3 socket of the microphone.




SENNHEISER e 604 | 3/7




Operation

Positioning the microphone on a drum

- $\, \triangleright \,$ Use the microphone clamp to attach the e 604 to the rim of the drum.
- ▶ Position the microphone on the drum so that it is 3 to 5 cm above the drumhead.

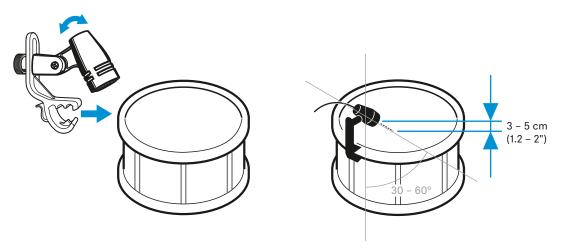

Position	Resulting sound	Commentary
A	More fundamental Little overtones	Position on the drum: 3 to 5 cm above the drumskin
В	Less fundamental Many overtones	The fundamental to overtones ratio can be adjusted by changing the angle of the microphone. The most balanced results are obtained at an angle of 30 to 60°.
С		Use of a second e 604 for picking up the bottom of the drumskin and the snares. NB: The lower microphone must be phase-reversed to avoid phase-cancellation effects due to the second microphone being on the other side of the drumskin.

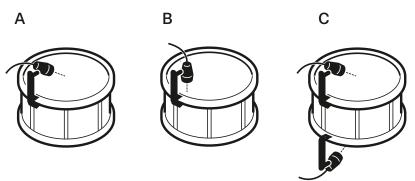


SENNHEISER e 604 | 4/7



Positioning the monitor loudspeakers

▶ To prevent feedback and crosstalk, postion your monitor loudspeakers in the angle area of the highest cancellation of the microphone (approx. 135°).

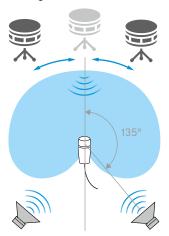


Cleaning and maintaining the e 604

CAUTION

LIQUIDS CAN DAMAGE THE ELECTRONICS OF THE PRODUCT!

Liquids entering the housing of the product can cause a short-circuit and damage the electronics.

- ▷ Do not use any solvents or cleansing agents.
- Disconnect the products from the power supply system and remove rechargeable batteries and batteries before you begin cleaning.
- ▷ Clean all products only with a soft, dry cloth.

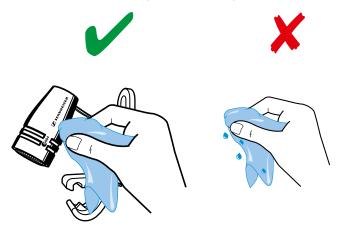


SENNHEISER e 604 | 5/7




Specifications

Transducer principle	dynamic							
Frequency response	40 - 18,000 Hz							
Pick-up pattern	cardioid							
Sensitivity (free field, no load)	1.8 mV/Pa							
Nominal impedance (at 1 kHz)	350 Ω							
Min. terminating impedance	1 kΩ							
Connector	XLR-3							
Dimensions	Ø 33 mm, length 59 mm							
Weight	60 g							

Polar pattern

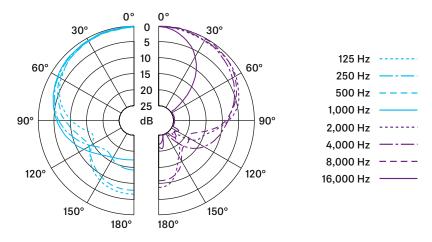


Frequency response

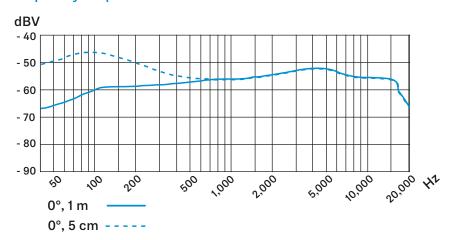

SENNHEISER e 604 | 6/7



Connector assignment

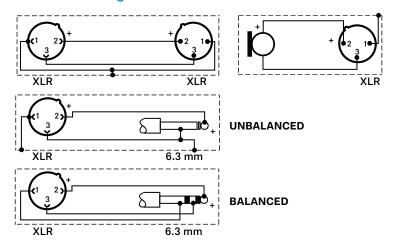

Overview of applications

- Primary application
- Secondary application

				144	#	•	#												9
e 602 II					•		•		•	•		•			•			•	
e 604					•								•	•	•	•		•	
e 608					•								•	•		•			•
e 609 silver								•					•	•	•	•			•
e 614			•	•		•	•				•					•	•		•
e 835	•	•																•	
e 845	•	•																	•
e 865	•	•																	•
e 901											•	•						•	
e 902									•	•		•			•			•	
e 904					•								•	•	•	•		•	
e 906								•					•	•	•	•		•	
e 908					•								•	•	•	•		•	
e 914			•	•			•	•			•					•	•	•	
e 935	•																	•	
e 945	•																		•
e 965	•	•				•												•	•

SENNHEISER e 604 | 7/7